


# VoIP<sup>2</sup>All 16 Channel Gateway

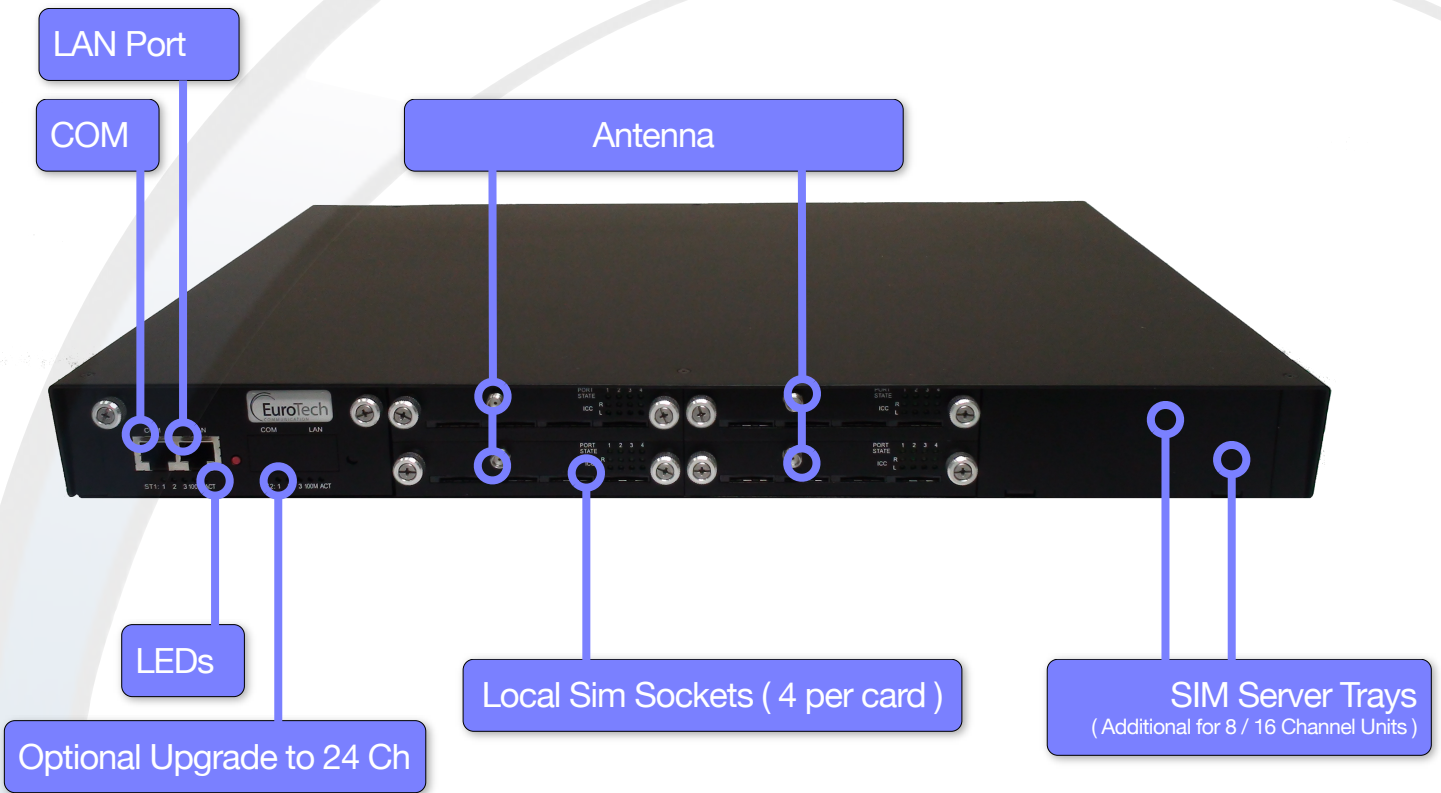

## Included:

- One Voip2ALL GSM / UMTS / CDM Gateway
- One 110/220V Power Cord
- Four antennas
- One LAN cable
- One Com Cable - Debugging
- Mounting Panels and screws
- One Software Installation CD



**Note:** If you are in a different subnet use the TCP/IP Cross Cable to connect directly to the PC. Connect to the Software and then change the IP Address to a more suitable address.

## Installation

1. Connect the LAN cable to the gateway.
2. Insert the SIM / UMTS/ R-UIM cards in their ports (below the antenna). Insert cards with metal contacts upward and the chipped triangle inward.
3. Connect and position the antennas at least 1 meter from the gateway.
4. Connect the power supply to the Gateway.
5. Insert the CD into the PC's CDROM drive.
6. Run the 'Setup.exe' on the CD and install the PC Management Software.
7. Run the PC Software from the 'Voip2ALL' shortcut on the Desktop.
8. Turn the gateway's power switch on, seen on left.
9. Wait until the end of the initialization process, when the LEDs below the LAN connection are: LED 1 - off, LED 2 - blinking, and LED 3 - on.
10. Press the 'connect' tab to open the connect window.
11. Enter the default IP address 10.16.2.245.
12. Enter the default port: 2007.
13. Press 'OK' to connect.
14. Adjust settings to fit your requirement and press save.
15. The Gateway is now ready for configuration.
16. For further information consult the manual in the CD or visit us at [www.eurotech-communication.com](http://www.eurotech-communication.com)